


Wiring diagram for 650001333 (16 kW)

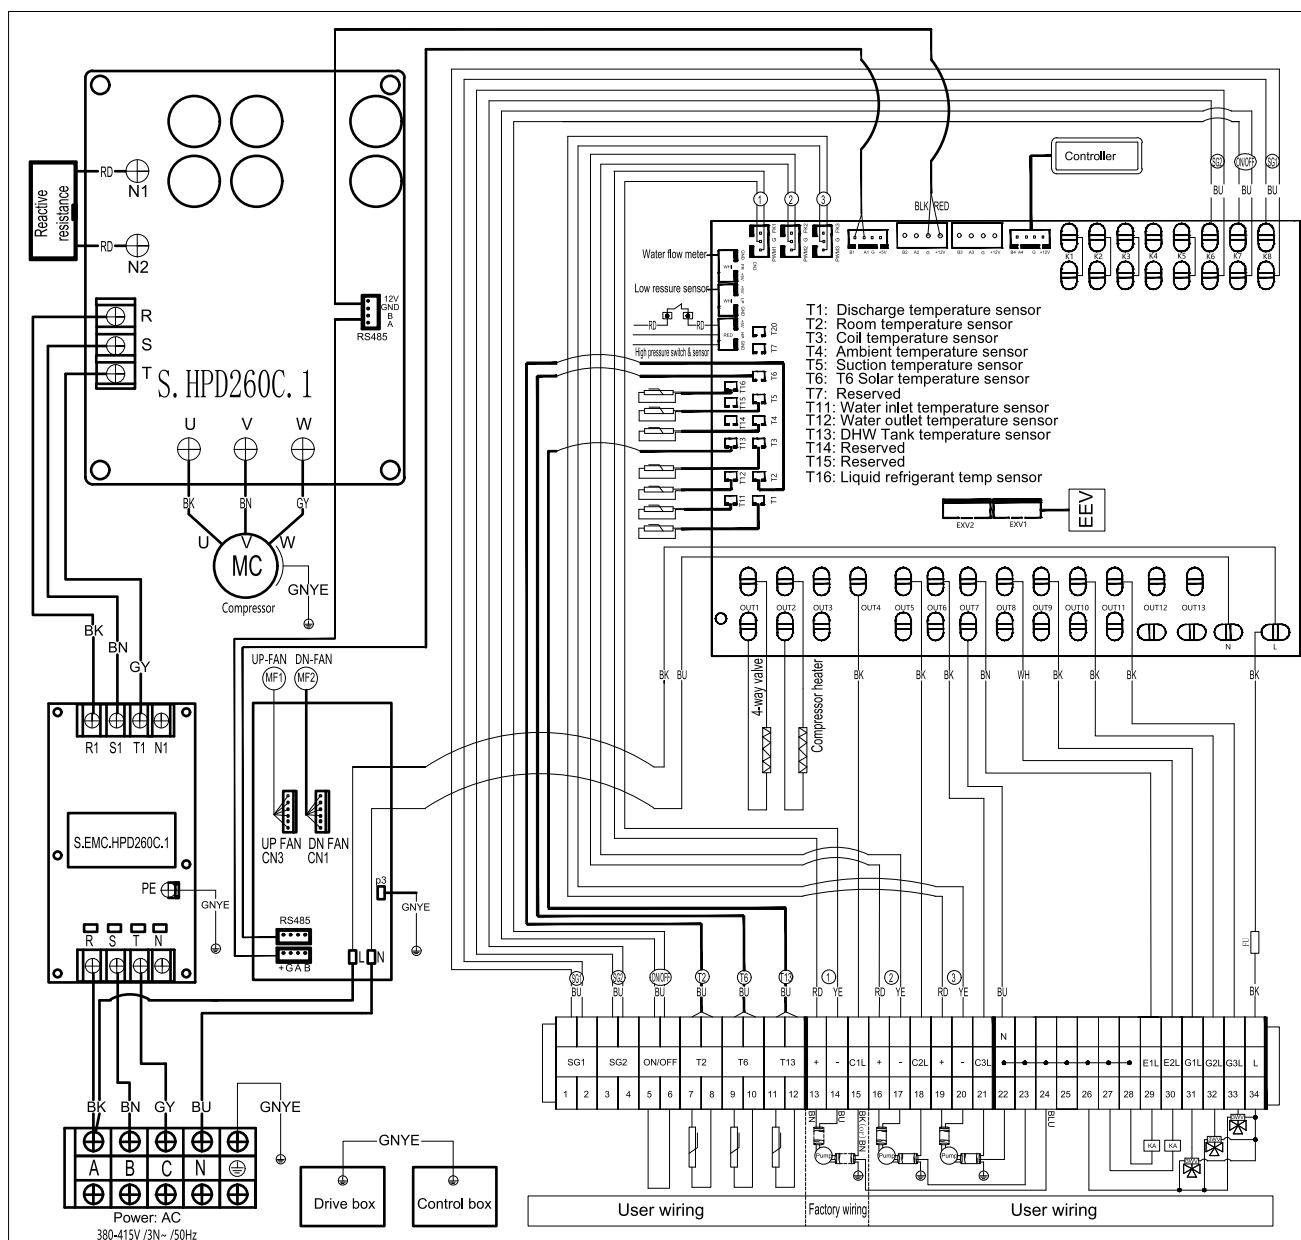

K1: Heating switch
 K2: Cooling switch
 K3: Reserve
 K4: Water flow switch
 K5: Reserve
 K6: SG2 contact without power
 K7: ON/OFF
 K8: SG1 contact without power

E1: DHW Electrical heater
 E2: Buffer tank electrical heater
 C1: Built-in water pump
 C2: Auxiliary pump or indoor circulation pump
 C3: DHW auxiliary pump
 G1: DHW 3-way valve
 G2: Season 3-way valve(G2L:OFF:Cooling or G2L:ON:heating)
 G3: Solar 3-way valve(Solar auxiliary AC heating)