


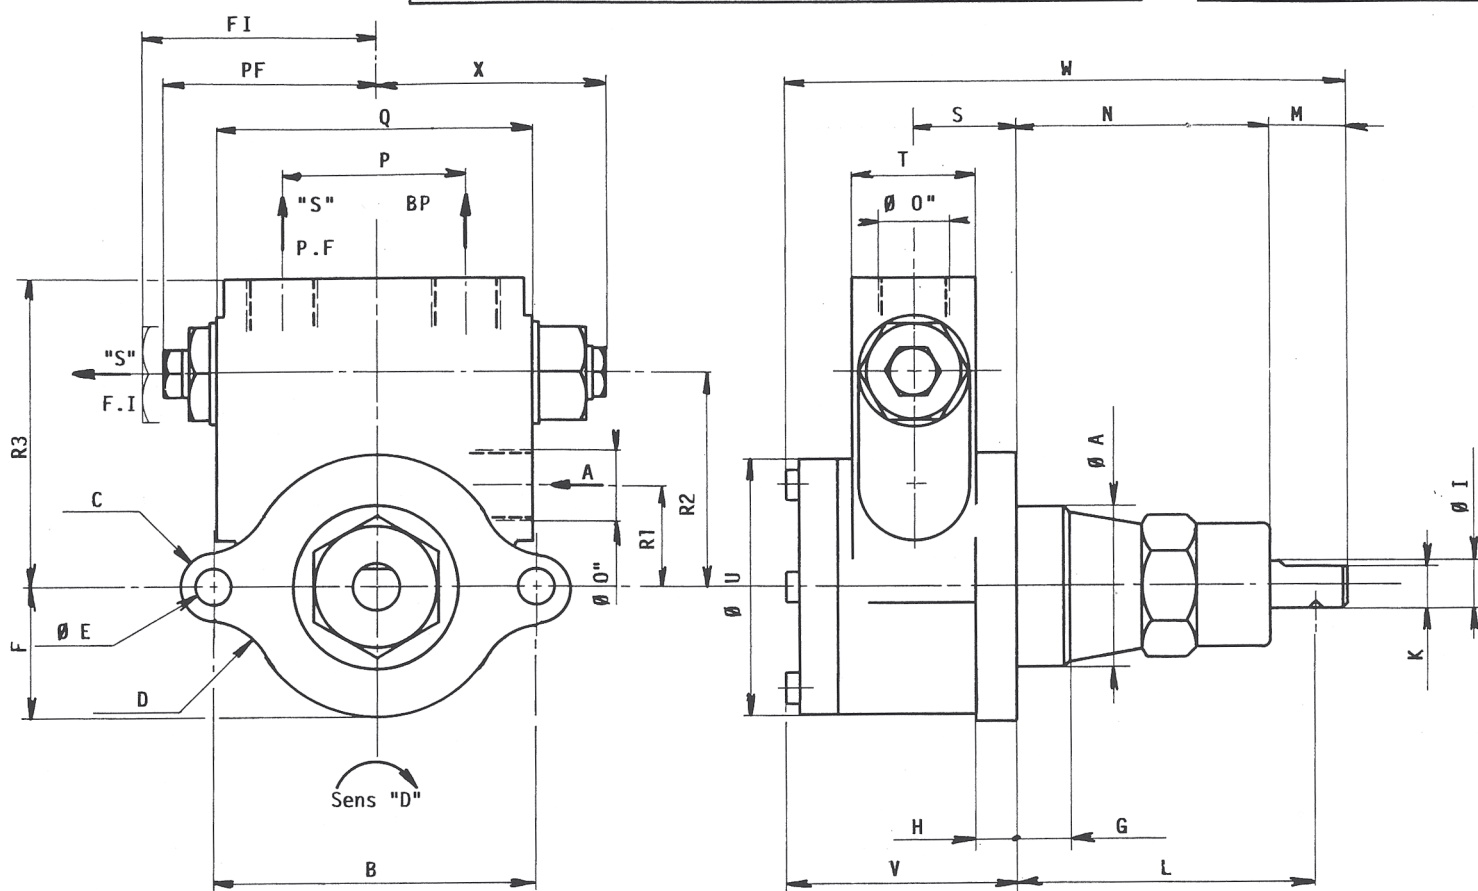

* A : Aspiration

* S : Sortie ou refoulement

*BP : Retour au réservoir

* L'utilisation des orifices est donnée pour le sens de rotation "D"
Pour le sens "I" prendre disposition symétriqueMONTAGE STANDARD

POMPE MODELE	BRIDE								ARBRE					CARTER															
	A	B	C	D	E	F	G	H	I	K	L	M	N	O"	P	Q	R1	R2	R3	S	T	U	V	W	X	PF	FI		
VBR - SN08	54	92	13	13	11	40	16	14	12	11	67	26	50	3/8	38	90	30	63	90	20	33	51	54	130	77	61	63		
VBGR - SN16	54	92	13	13	11	40	16	14	12	11	67	26	50	1/2	44	90	32	67	94	30	38	70	68	144	77	61	63		
VBHR - SN22	60	120	13	25	13	50	18	15	18	16	112	29	95	3/4	67	118	38	80	115	38	45	95	86	210	85	78	85		
VBHGR - SN27	80	150	15	-	15	60	25	18	22	19	107	36	90	1	80	150	18	80	120	85	70	115	147	273	111	117	107		

MONTAGE OPTION "C"

POMPE MODELE	BRIDE								ARBRE					CARTER															
	A	B	C	D	E	F	G	H	I	K	L	M	N	0"	P	Q	R1	R2	R3	S	T	U	V	W	X	PF	FI		
VBR - SN08	54	92	13	13	11	40	16	14	12	11	67	21	55	3/8	38	90	30	63	90	20	33	51	54	130	77	61	63		
VBGR - SN16	54	92	13	13	11	40	16	14	12	11	67	21	55	1/2	44	90	32	67	94	30	38	70	68	144	77	61	63		
VBHR - SN22	60	120	13	25	13	50	18	15	18	16	112	27	97	3/4	67	118	38	80	115	38	45	95	86	210	85	78	85		
VBHGR - SN27	80	150	15	-	15	60	25	18	22	19	107	36	90	1	80	150	18	80	120	85	70	115	147	273	111	117	107		