

## DIP Switches Instruction for PCB board of R32 HP Models (650001362)



### Definition for the numbers of the DIP switch:

Dip Switch 1: Flow meter switch, 1 inch “off”, 1.5 inch “on”.

Dip Switch 2: No definition, default value “off”

Dip Switch 3: HP model selection: single phase “off”, three phase “on”

Dip Switch 4-8: definition, default value “off”

**Please dial different settings for different models according to the chart below.**

Model	1	2	3	4	5	6	7	8
6kW-R32	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
9kW-R32	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
12kW-R32	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
18kW-R32	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
18kW-T-R32	OFF	OFF	ON	ON	OFF	ON	OFF	OFF