


Before installation of the covering

Check the product for damages immediately upon delivery.
We cannot assume liability for items with material defects when they have already been installed!

Scope of delivery:

- 2 x side panel
- 1 x front panel
- 1 x shelf
- 22 x special screw
- 1 x special tool

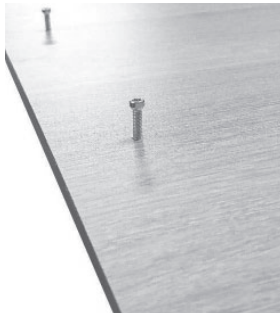


Step 1

After checking the contents, put the front panel on a flat and clean surface with the face downwards. Take 16 screws from the accessory kit and screw them about two threads deep into the planned holes on the inner side of the front panel.




Step 5

Screw the side panels and front panel together with the special tool.

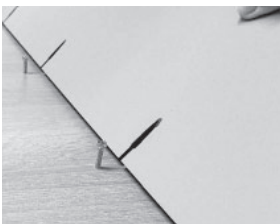

Step 2

Place the shelf onto the front panel and move it carefully with the milling grooves over the screw heads, as shown in the illustration.

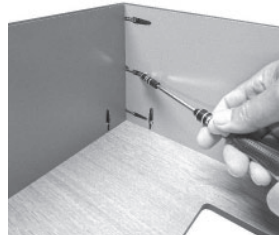

Step 6

Subsequently, you connect each side panel with the shelf by using 3 screws.



Step 3

Screw the shelf and front panel together with the special tool.



Step 4

Place the side elements onto the front panel so that shelf and side panels are flush to each other.



Step 7

The finished covering can now be slid over the pre-wall element. It is attached with a special adhesive and by installing the sanitary element.