

Data sheet | Item number: 207-1331

Gelbox; for cables; Branch; with gel; 221, 2273 Series; without splicing connectors; Size 1; gray


www.wago.com/207-1331



RoHS
Compliant



Color: 

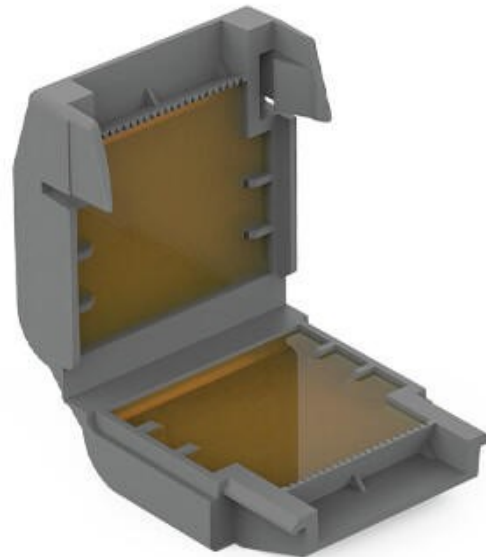

Item description

The Benefits for You:

- Easy, fast and safe to use
- Can be used immediately and accessed again later
- Silicon-free
- Label-free
- Suitable for indefinite storage
- The complete system consisting of Gelboxes and WAGO connectors has been VDE-tested and IPX8-certified.

Data

Connection data

Actuation type

Verrastung

Subject to changes. Please also observe the further product documentation!

WAGO Kontakttechnik GmbH & Co. KG
Hansastr. 27
32423 Minden
Phone: +49571 887-0 | Fax: +49571 887-169
Email: info.de@wago.com | Web: www.wago.com

Do you have any questions about our products?
We are always happy to take your call at +49 (571) 887-44222.



Geometrical Data

Width	33,6 mm / 1.323 inch
Height	17,8 mm / 0.701 inch
Depth	32 mm / 1.26 inch

Mechanical data

Mounting type	Fliegende Verbindung
Protection type	IPx8 (2m/2h) gemäß 60529

Material Data

Color	gray
Housing material	Polypropylen
Weight	12.7 g

Environmental Requirements

Surrounding air temperature (operation)	85 ... 85 °C
Surrounding air temperature (storage)	85 ... 85 °C
Continuous operating temperature	105 ... 105 °C

Commercial data

Packaging type	BOX
Country of origin	IT
GTIN	4055143997799
Customs tariff number	85389099990

Counterpart

Downloads

Documentation

System Description

System Description 207 Series Gel boxes	pdf 1.1 MB	Download
---	---------------	----------


Subject to changes. Please also observe the further product documentation!

Installation Notes


Installation




Gelbox öffnen.

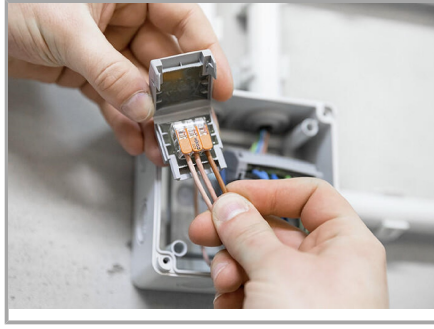


Verdrahtete Klemme in die Gelbox einlegen.

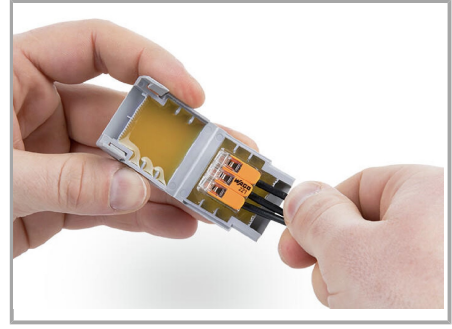


Verdrahtete Klemme in die Gelbox einlegen.

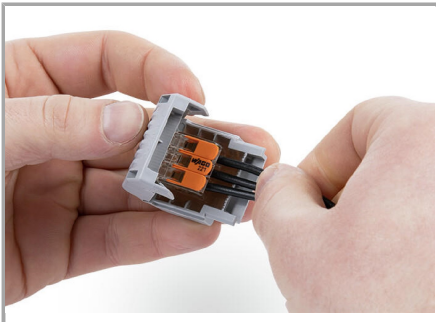

Gelbox schließen.

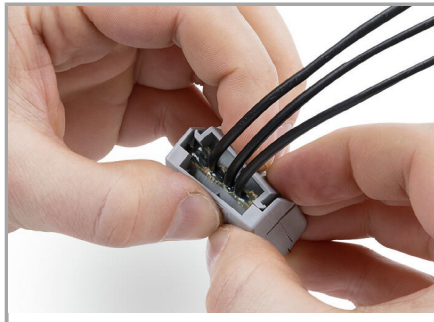

Verrastung sicher verschließen.

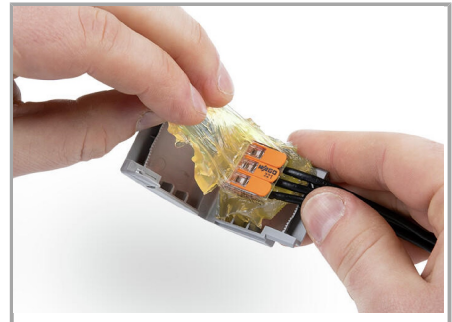

Wiederzugänglich:

- Gelbox öffnen
- Gel entfernen
- umverdrahten mit neuen Komponenten

Subject to changes. Please also observe the further product documentation!